Waveguide Adapter

Introduction

This is a model of an adapter for microwave propagation in the transition between a rectangular and an elliptical waveguide. Such waveguide adapters are designed to keep energy losses due to reflections at a minimum for the operating frequencies. To investigate the characteristics of the adapter, the simulation includes a wave traveling from a rectangular waveguide through the adapter and into an elliptical waveguide. The S-parameters are calculated as functions of the frequency. The involved frequencies are all in the single-mode range of the waveguide, that is, the frequency range where only one mode is propagating in the waveguide.

Model Definition

The waveguide adapter consists of a rectangular part smoothly transcending into an elliptical part as seen in Figure 1.

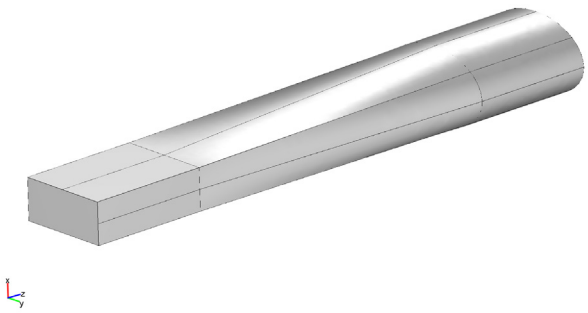

Figure 1: The geometry of the waveguide adapter.

The walls of manufactured waveguides are typically plated with a good conductor such as silver. The model approximates the walls by perfect conductors. This is represented by the boundary condition $\mathbf{n} \times \mathbf{E} = \mathbf{0}$.

The rectangular port is excited by a transverse electric (TE) wave, which is a wave that has no electric field component in the direction of propagation. This is what an incoming wave would look like after traveling through a straight rectangular waveguide with the same cross section as the rectangular part of the adapter. The excitation frequencies are selected so that the TE_{10} mode is the only propagating mode through the rectangular waveguide. The cutoff frequencies for the different modes can be achieved analytically from the relation

$$(\nu_c)_{mn} = \frac{c}{2}\sqrt{\left(\frac{m}{a}\right)^2 + \left(\frac{n}{b}\right)^2}$$

where m and n are the mode numbers, and c is the speed of light. For the TE_{10} mode, $m = 1$ and $n = 0$. With the dimensions of the rectangular cross section ($a = 2.286$ cm and $b = 1.016$ cm), the TE_{10} mode is the only propagating mode for frequencies between 6.6 GHz and 14.7 GHz.

Although the shape of the TE_{10} mode is known analytically, this model lets you compute it using a numerical port. This technique is very general, in that it allows the port boundary to have any shape. The solved equation is

$$\nabla\times(n^{-2}\nabla\times H_n) + (n^{-2}\beta^2 - k_0^2)H_n = 0$$

Here H_n is the component of the magnetic field perpendicular to the boundary, n the refractive index, β the propagation constant in the direction perpendicular to the boundary, and k_0 the free space wave number. The eigenvalues are $\lambda = -j\beta$.

The same equation is solved separately at the elliptical end of the waveguide. The elliptical port is passive, but the eigenmode is still used in the boundary condition of the 3D propagating wave simulation. The dimensions of the elliptical end of the waveguide are such that the frequency range for the lowest propagating mode overlaps that of the rectangular port.

With the stipulated excitation at the rectangular port and the numerically established mode shapes as boundary conditions, the following equation is solved for the electric field vector $\mathbf{E}$ inside the waveguide adapter:

$$\nabla\times(\mu_r^{-1}\nabla\times\mathbf{E}) - k_0^2\left(\varepsilon_r - \frac{j\sigma}{\omega\varepsilon_0}\right)\mathbf{E} = 0$$

where μ_r denotes the relative permeability, j the imaginary unit, σ the conductivity, ω the angular frequency, ε_r the relative permittivity, and ε_0 the permittivity of free space. The model uses the following material properties for free space: $\sigma = 0$ and $\mu_r = \varepsilon_r = 1$.

Results

Figure 2 shows a single-mode wave propagating through the waveguide.

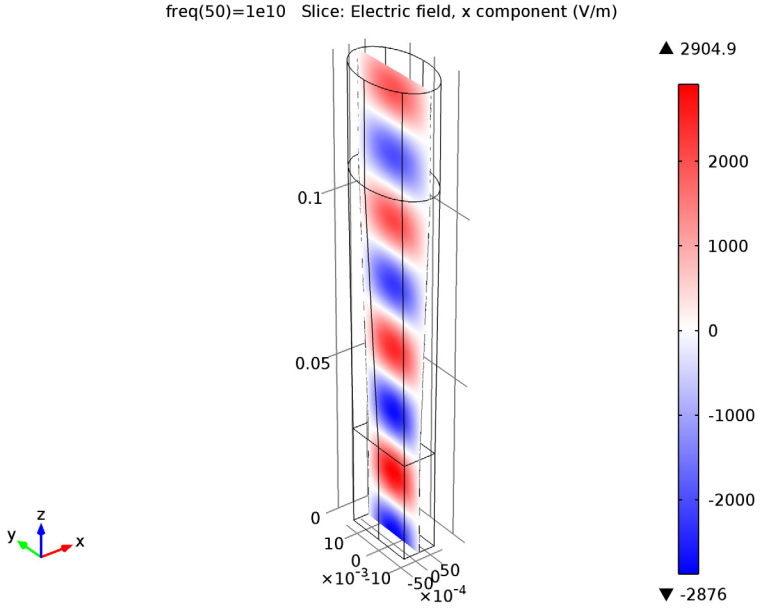

Figure 2: The x component of the propagating wave inside the waveguide adapter at the frequency 10 GHz.

Naming the rectangular port Port 1 and the elliptical port Port 2, the S-parameters describing the reflection and transmission of the wave are defined as follows:

$$S_{11} = \frac{\int_{\text{Port 1}} ((E_c - E_1) \cdot E_1^*) dA_1}{\int_{\text{Port 1}} (E_1 \cdot E_1^*) dA_1}$$

$$S_{21} = \frac{\int_{\text{Port 2}} (E_c \cdot E_2^*) dA_2}{\int_{\text{Port 2}} (E_2 \cdot E_2^*) dA_2}$$

Here E_c is the calculated total field. E_1 is the analytical field for the port excitation, and E_2 is the eigenmode calculated from the boundary mode analysis and normalized

with respect to the outgoing power flow. Figure 3 and Figure 4 show the S_{11} and S_{21} parameters as functions of the frequency.

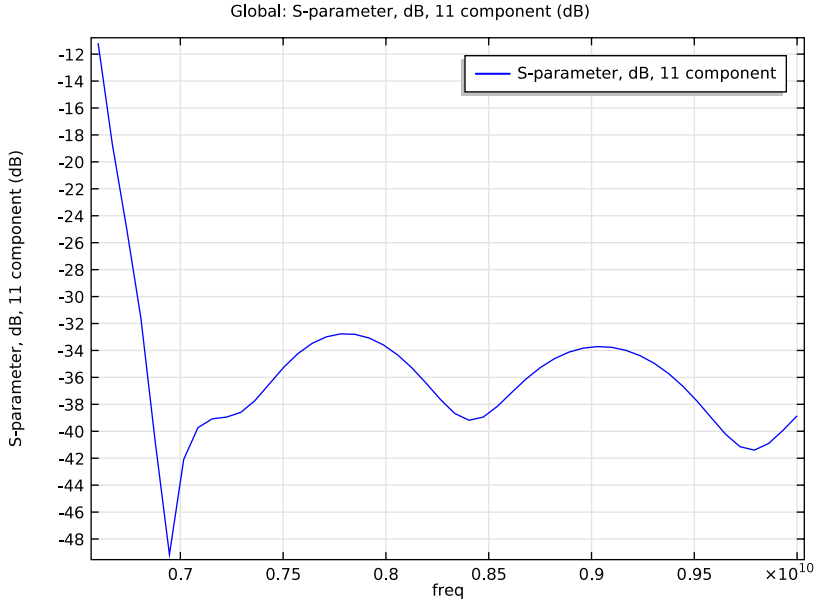

Figure 3: The S_{11} parameter (in dB) as a function of the frequency. This parameter describes the reflections when the waveguide adapter is excited at the rectangular port.

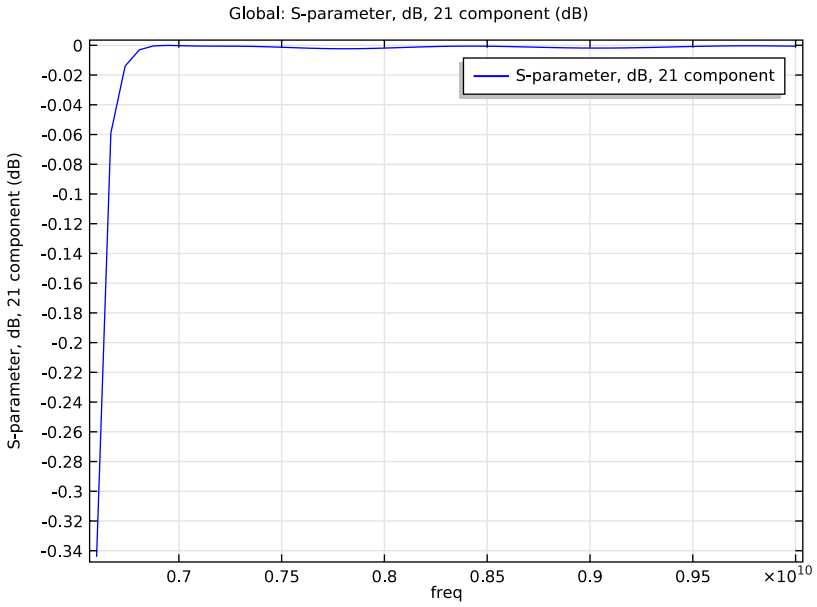

Figure 4: The S_{21} parameter (in dB) as a function of the frequency. This parameter is a measure of the part of the wave that is transmitted through the elliptical port when the waveguide adapter is excited at the rectangular port.

Model Library path: `RF_Module/Transmission_Lines_and_Waveguides/waveguide_adapter`

Modeling Instructions

From the **File** menu, choose **New**.

NEW

1 In the **New** window, click the **Model Wizard** button.

MODEL WIZARD

1 In the **Model Wizard** window, click the **3D** button.

2 In the **Select physics** tree, select **Radio Frequency>Electromagnetic Waves, Frequency Domain (emw)**.

3 Click the **Add** button.

4 Click the **Study** button.

5 In the tree, select **Custom Studies>Empty Study**.

6 Click the **Done** button.

STUDY 1

Step 1: Boundary Mode Analysis

1 On the **Study** toolbar, click **Study Steps** and choose **Other>Boundary Mode Analysis**.

2 In the **Boundary Mode Analysis** settings window, locate the **Study Settings** section.

3 In the **Mode analysis frequency** edit field, type `7[GHz]`.

The exact value of this frequency is not important. What matters is that it should be above the cutoff frequency for the fundamental mode, but below that for the next mode. This setting ensures that the boundary mode analysis finds the fundamental mode.

Add another boundary mode analysis, for the second port.

Step 2: Boundary Mode Analysis 2

1 On the **Study** toolbar, click **Study Steps** and choose **Other>Boundary Mode Analysis**.

2 In the **Boundary Mode Analysis** settings window, locate the **Study Settings** section.

3 In the **Port name** edit field, type `2`.

4 In the **Mode analysis frequency** edit field, type `7[GHz]`.

Finally, add the 3D equation for the propagating wave in the waveguide.

Step 3: Frequency Domain

1 On the **Study** toolbar, click **Study Steps** and choose **Frequency Domain>Frequency Domain**.

Proceed to import the geometry.

GEOMETRY 1

Import 1

1 On the **Home** toolbar, click **Import**.

2 In the **Import** settings window, locate the **Import** section.

3 Click the **Browse** button.

4 Browse to the model's Model Library folder and double-click the file `waveguide_adapter.mphbin`.

5 Click the **Import** button.

MATERIALS

On the **Home** toolbar, click **Add Material**.

ADD MATERIAL

1 Go to the **Add Material** window.

2 In the tree, select **Built-In>Air**.

3 In the **Add material** window, click **Add to Component**.

4 On the **Home** toolbar, click **Add Material**.

This closes the **Add Material** window.

MATERIALS

Air

By default, the first material you add applies on all domains so you need not alter any settings.

ELECTROMAGNETIC WAVES, FREQUENCY DOMAIN

Port 1

1 On the **Physics** toolbar, click **Boundaries** and choose **Port**.

2 In the **Port** settings window, locate the **Port Properties** section.

3 From the **Type of port** list, choose **Numeric**.

4 From the **Wave excitation at this port** list, choose **On**.

5 Select Boundary 13 only.

The wave enters the adapter through the port with a rectangular cross section.

Port 2

1 On the **Physics** toolbar, click **Boundaries** and choose **Port**.

2 In the **Port** settings window, locate the **Port Properties** section.

3 From the **Type of port** list, choose **Numeric**.

4 In the **Port name** edit field, type `2`.

5 Select Boundary 6 only.

This is the exit port, the one with an elliptical cross-section.

MESH 1

Size

1 In the **Model Builder** window, under **Component 1** right-click **Mesh 1** and choose **Free Tetrahedral**.

2 In the **Size** settings window, locate the **Element Size** section.

3 Click the **Custom** button.

4 Locate the **Element Size Parameters** section. In the **Maximum element size** edit field, type `0.006`.

5 Click the **Build All** button.

STUDY 1

Now set up the study to find the boundary modes and use them when computing the field distribution over a range of frequencies.

Step 1: Boundary Mode Analysis

1 In the **Model Builder** window, expand the **Study 1** node, then click **Step 1: Boundary Mode Analysis**.

2 In the **Boundary Mode Analysis** settings window, locate the **Study Settings** section.

3 In the **Search for modes around** edit field, type `50`.

This value should be in the vicinity of the value that you expect the fundamental mode to have. If you do not know this in advance, you can experiment with some different values or estimate one from analytical formulas valid for cross-sections resembling yours.

4 From the **Transform** list, choose **Out-of-plane wave number**.

Step 2: Boundary Mode Analysis 2

1 In the **Model Builder** window, under **Study 1** click **Step 2: Boundary Mode Analysis 2**.

2 In the **Boundary Mode Analysis** settings window, locate the **Study Settings** section.

3 In the **Search for modes around** edit field, type `50`.

4 From the **Transform** list, choose **Out-of-plane wave number**.

Step 3: Frequency Domain

1 In the **Model Builder** window, under **Study 1** click **Step 3: Frequency Domain**.

2 In the **Frequency Domain** settings window, locate the **Study Settings** section.

3 In the **Frequencies** edit field, type `range(6.6e9,3.4e9/49,1.0e10)`.

4 On the **Home** toolbar, click **Compute**.

RESULTS

Electric Field (emw)

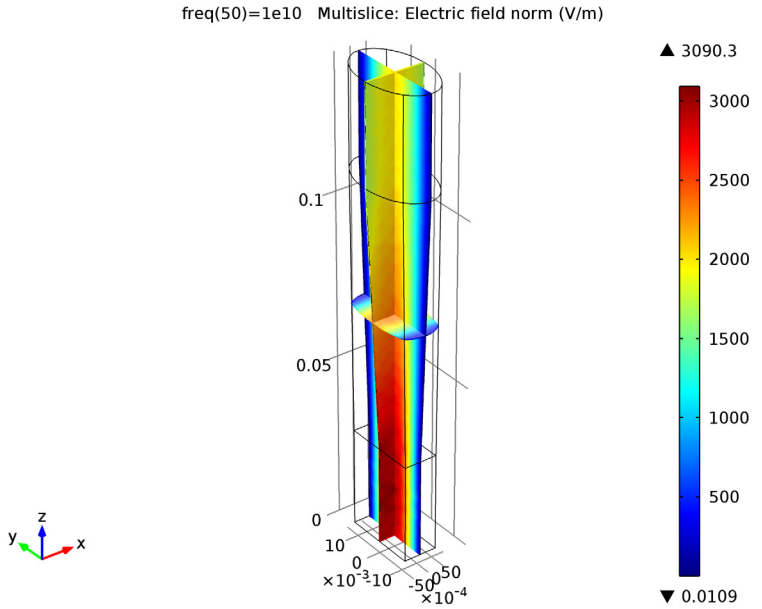

The default plot shows the norm of the electric field on slices through the waveguide; you can simplify and improve this plot.

Delete the Multislice plot.

1. In the **Model Builder** window, expand the **Electric Field (emw)** node.
2. Right-click **Multislice 1** and choose **Delete**.
3. Right-click **Electric Field (emw)** and choose **Slice**.
4. In the **Slice** settings window, click **Replace Expression** in the upper-right corner of the **Expression** section. From the menu, choose **Electromagnetic Waves, Frequency Domain>Electric>Electric field>Electric field, x component (emw.Ex)**.
5. Locate the **Coloring and Style** section. From the **Color table** list, choose **WaveLight**.
6. Locate the **Plane Data** section. In the **Planes** edit field, type 1.
7. On the **Electric Field (emw)** toolbar, click **Plot**.

   The plot now shows the x-component of the electric field at the highest frequency, 10 GHz (compare with Figure 2). If you would like to see the field for other frequencies, you can select them by clicking on Plot Group 3D (pg1).

Proceed to plot the S-parameters as functions of the frequency.

1D Plot Group 2

1 On the **Home** toolbar, click **Add Plot Group** and choose **1D Plot Group**.

2 On the **1D Plot Group 2** toolbar, click **Global**.

3 In the **Global** settings window, click **Replace Expression** in the upper-right corner of the **y-Axis Data** section. From the menu, choose **Electromagnetic Waves, Frequency Domain>Ports>S-parameter, dB>S-parameter, dB, 11 component (emw.S11dB)**.

4 On the **1D Plot Group 2** toolbar, click **Plot**.

This plot should closely resemble that in Figure 3.

5 Click **Replace Expression** in the upper-right corner of the **y-Axis Data** section. From the menu, choose **Electromagnetic Waves, Frequency Domain>Ports>S-parameter, dB>S-parameter, dB, 21 component (emw.S21dB)**.

6 On the **1D Plot Group 2** toolbar, click **Plot**.

This reproduces the plot in Figure 4. Finally, add S_{11} to obtain both S-parameters in the same plot.

7 Click **Add Expression** in the upper-right corner of the **y-Axis Data** section. From the menu, choose **Electromagnetic Waves, Frequency Domain>Ports>S-parameter, dB>S-parameter, dB, 11 component (emw.S11dB)**.

8 On the **1D Plot Group 2** toolbar, click **Plot**.